

Manual



VTG/VIG Local Display

for Wall Mounting, with Analog and Digital Output

Manual-Version

VTG-VIG_M_EN_170314_E002

SW-Version

This manual is valid for

SW: 07-12 and higher

Index

| | | |
|-----------|--|-----------|
| 1. | GENERAL INFORMATION | 5 |
| 1.1. | Features | 5 |
| 1.2. | Safety | 5 |
| 1.2.1. | General Safety | 5 |
| 1.2.2. | Safety Requirements for Ex installations | 6 |
| 1.2.3. | Warnings in this manual | 6 |
| 1.3. | Ordering Codes and Accessories | 7 |
| 1.3.1. | Ordering Code | 7 |
| 1.3.2. | Accessories | 7 |
| 2. | GETTING STARTED | 8 |
| 2.1. | Unpacking | 8 |
| 2.2. | Operating Elements | 8 |
| 2.2.1. | Operating elements VTG/VIG Front Side | 8 |
| 2.2.2. | Operating Elements VTG/VIG Inside | 9 |
| 2.3. | Pin Assignments | 9 |
| 2.3.1. | Pin assignment screw type terminal | 9 |
| 2.4. | Quick start | 10 |
| 2.4.1. | First Operation | 10 |
| 2.4.2. | Manual Control | 11 |
| 3. | INSTALLATION | 12 |
| 3.1. | Mechanical Installation | 12 |
| 3.2. | Electrical Installation | 12 |
| 3.2.1. | Connecting the cables | 13 |
| 3.2.2. | Power Supply and Grounding | 13 |
| 3.2.3. | Operation as passive 4 - 20 mA sensor | 13 |
| 3.2.4. | Operation with current and frequency output | 14 |
| 3.2.5. | Operation with frequency output only | 16 |
| 3.2.6. | Operation as indicator without outputs | 17 |
| 3.3. | Ex Installation | 17 |
| 3.3.1. | 2 Wire Operation | 17 |
| 3.3.2. | Operation with analogue and frequency output | 17 |
| 3.3.3. | Operation with Frequency Output only | 17 |
| 4. | MANUAL OPERATION | 18 |
| 4.1. | Power On Sequence and Principles of Manual Control | 18 |
| 4.1.1. | Function of the LED's | 18 |
| 4.2. | Measuring mode | 19 |
| 4.2.1. | Function of the keys | 19 |
| 4.2.2. | Display selection | 19 |
| 4.2.3. | Resetting the batch value | 19 |
| 4.2.4. | Info Menu | 19 |

| | | |
|-----------|--------------------------------------|-----------|
| 4.3. | Control Mode | 20 |
| 4.3.1. | Function of the keys..... | 20 |
| 4.3.2. | Submenus in the Main Menu | 20 |
| 4.3.3. | DISPLAY Menu | 21 |
| 4.3.4. | SETUP Menu | 24 |
| 4.3.5. | LINEAR Menu | 34 |
| 4.3.6. | I/O TEST Menu | 36 |
| 4.3.7. | SERVICE Menu | 37 |
| 5. | REMOTE OPERATION | 38 |
| 5.1. | Standard interface..... | 38 |
| 5.1.1. | Electrical connections | 38 |
| 5.2. | USB interface..... | 39 |
| 5.2.1. | Electrical connection..... | 39 |
| 5.3. | HART | 39 |
| 5.3.1. | Electrical connection for HART | 39 |
| 5.3.2. | HART Interface Protocol..... | 39 |
| 6. | SERVICE AND MAINTENANCE..... | 40 |
| 6.1. | Maintenance | 40 |
| 6.2. | Service | 40 |
| 6.3. | Calibration..... | 40 |
| 6.3.1. | Calibrating the current output | 41 |
| 6.3.2. | Reset the TOTAL counter..... | 42 |
| 6.4. | Trouble shooting | 42 |
| 7. | LISTINGS | 43 |
| 7.1. | Warranty | 43 |
| 7.2. | Certifications and Compliances | 43 |
| 7.3.1. | General Data..... | 45 |
| 7.3.3. | Dimensional Drawings | 47 |
| 7.4. | WEEE and RoHS..... | 47 |
| 7.5. | List of figures..... | 47 |

1. General Information

1.1. Features

The VTG/VIG are compact, intelligent local displays with built in carrier frequency (VTG) or inductive (VIG) pickup.

They can be used as passive 4 - 20 mA sensors (2 wire operation) or with auxiliary supply also as sensors with frequency or switch output.

The VTG/VIG can be adjusted to any flow meter, as the K-factor is freely settable. The selectable dimensions include virtually all worldwide used dimensions.

The 20 point linearization of the input signal provides the possibility to display also strongly nonlinear signals with high accuracy.

As a standard the VTG/VIG (except the versions with NAMUR output) are equipped with a proprietary interface which can be converted to USB via the external converter CON.USB.WT. As an option USB and HART interfaces are available.

For fast test setups in the lab and easy setup of individual parameters, the PC based control SW EasyControl for WINDOWS® XP, VISTA and 7 is available free of charge.

1.2. Safety

1.2.1. General Safety

All statements regarding safety of operation and technical data in this manual will only apply when the unit is operated correctly in accordance with this manual.

The data for Ingress Protection will only apply when all connectors are capped properly with the corresponding counterpart with the same or better IP rating. Cable glands must be populated with cables with the specified diameter and closed properly.

During operation all openings of the housing must be closed unless otherwise noted in this manual.

All connections to the load and to the supply must be made with shielded cables unless otherwise noted in this manual. This unit must be grounded.

This unit must be supplied by a safety approved power supply with outputs which comply with Safety Extra Low Voltage (SELV).

As a protection against fire in the positive supply a fuse with a current rating not higher than the current carrying capacity of the cable used is required.

National and international standards regarding electrical installation have to be adhered to.

The devices described in this manual may only be connected and operated by authorized and qualified personnel.

1.2.2. Safety Requirements for Ex installations

When the VTG/VIG are to be used in hazardous areas, suitable isolation amplifiers or barriers have to be used.

When using long cables make sure that the maximum inductances and capacitances for the respective voltage or gas group are not exceeded.

The USB interface must not be used in hazardous areas.

Only Ex certified units may be used in hazardous areas.

1.2.3. Warnings in this manual

NOTE:

Notes provide important information for the correct usage of the equipment. If the notes are not observed, a malfunction of the equipment is possible.

WARNING!

Warnings provide very important information for the correct usage of the equipment. Not observing the warnings may lead to danger for the equipment and to danger for health and life of the user.

1.3. Ordering Codes and Accessories

1.3.1. Ordering Code

| | V | X | G | X | - | X | - | X | - | X | - | X | - | X |
|---|---|---|---|---|---|---|---|---|---|---|---|---|---|-----|
| Pickup-System | | | | | | | | | | | | | | |
| Carrier frequency | | T | | | | | | | | | | | | |
| Inductive | | I | | | | | | | | | | | | |
| Housing | | | | | | | | | | | | | | |
| Aluminium pressure die-casting, painted | | | | A | | | | | | | | | | |
| Stainless steel 1.4401 | | | | S | | | | | | | | | | |
| Mechanical Sensor | | | | | | | | | | | | | | |
| Short version for ZHM 02 - ZHM 04 and HM-Series | | | | | | K | | | | | | | | |
| Long version for ZHM 02 - ZHM 07 and HM-Series | | | | | | L | | | | | | | | |
| Short version for ZHM 01, SRZ-Series and LFM-Series | | | | | | R | | | | | | | | |
| Long version for ZHM 01, SRZ-Series and LFM-Series | | | | | | S | | | | | | | | |
| Connection Version | | | | | | | | | | | | | | |
| Cable gland | | | | | | | | K | | | | | | |
| Interface | | | | | | | | | | | | | | |
| HART-Interface | | | | | | | | | | H | | | | |
| USB-Interface (do not use in hazardous areas!) | | | | | | | | | | U | | | | |
| KEM-Interface | | | | | | | | | | N | | | | |
| Digital Output | | | | | | | | | | | | | | |
| Push/Pull Output | | | | | | | | | | | | P | | |
| NAMUR Output | | | | | | | | | | | | N | | |
| Ex Protection | | | | | | | | | | | | | | |
| Ex-version Ex i (no backlight for Ex) | | | | | | | | | | | | | | |
| ATEX | | | | | | | | | | | | | | |
| Zone 1 II 2G Ex ia IIC T4 Gb | | | | | | | | | | | | | | Ex |
| Zone 2 II 3G Ex nA IIC T4 Gc | | | | | | | | | | | | | | Exn |

1.3.2. Accessories

| Ordering Code | Description |
|---------------|--|
| CON.USB.WT | Interface converter KEM interface to USB |
| Upon request | Connector M12; type 713 |
| Upon request | cable, 8-pin, black |

2. Getting started

2.1. Unpacking

Verify that you have received the following items:

- VTG/VIG
- This manual

2.2. Operating Elements

2.2.1. Operating elements VTG/VIG Front Side

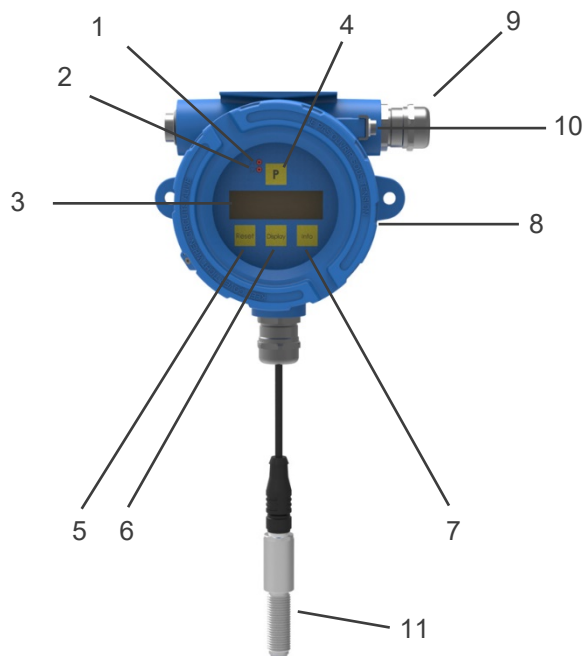


Fig. 1: Operating elements VTG/VIG front side

- 1 = LED „S1“, lights green, if the control output is in the active state
- 2 = LED „S2“, lights red, if the loop current exceeds 20 mA
- 3 = Display
- 4 = Pushbutton „P“, opens a selected menu and/or confirms the settings
- 5 = Pushbutton „RESET“, Measuring: resets the batch counter, Setup: Softkey
- 6 = Pushbutton „DISPLAY“, Measuring: changes the display, Setup: Softkey
- 7 = Pushbutton „INFO“, Measuring: opens the Info menu, Setup: Softkey
- 8 = Top cover
- 9 = Cable Gland
- 10 = PE terminal
- 11 = Pickup with connector

2.2.2. Operating Elements VTG/VIG Inside

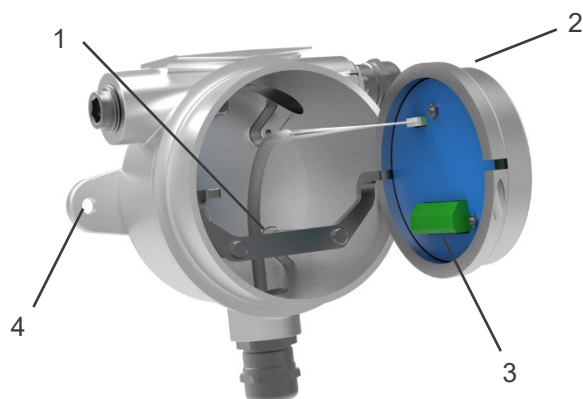


Fig. 2: Operating elements VTG/VIG inside

1 = Internal PE terminal

2 = USB connector (option)

3 = I/O terminals

4 = Mounting flange

2.3. Pin Assignments

2.3.1. Pin assignment screw type terminal



- 1 +I (positive supply 2- and 3-wire operation)
- 2 -I (current output, negative supply with 2 wire operation)
- 3 Ground terminal with 3 wire operation
- 4 Frequency output
- 5 Control and communication input A
- 6 Control input B (NAMUR)
- 7 +24 V supply for 4 (PP)

For an exact description of all inputs and outputs see chapter 3.2.

2.4. Quick start

WARNING!

As for safety and accuracy reasons many precautions must be taken, read chapter 3 carefully before installing the unit!

In case the unit has only to be operated for testing or learning purpose, the following connections have to be made (see chapter 3.2):

- Screw – if required – the VTG/VIG into the meter
- Connect the 24V DC supply
- The frequency and analog outputs as well as the interface may be connected as well, if those features are required. With built in USB interface the VTG/VIG can be operated from USB as well, if no output signal is required.

WARNING!

If the unit is connected to a bigger system, for your personal safety connect the protective ground as well!

WARNING!

In hazardous areas operation is only permitted with suitable Zener barrier or isolation amplifiers.

2.4.1. First Operation

Make sure that all mechanical and electrical connections are made properly.

Switch on the power supply.

After the power up sequence the display shows the preselected values.

If there is a flow (or as rotating tooth wheel), the corresponding flow will be calculated according to the set K-factor and will be displayed.

The display view can be altered by pressing the key “Display”.

The device status information can be viewed by pressing the key “Info” for 3 seconds.

If the function is activated, the BATCH reading can be reset to zero by pressing the key “Reset”.


For entering the SETUP menu press “P” for 3 seconds.

2.4.2. Manual Control

In the manual control menus all configurations can be made. The submenus, in which the functionality of the VTG/VIG or any factors can be altered, are protected by passwords.

The menu itself is self-explaining, the function of the softkeys (the lower 3 buttons) is indicated in the display above the pushbutton.


For entering the manual control menu press the pushbutton “P” until the display shows:

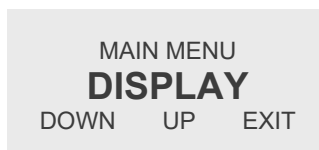A rectangular display area with a light gray background. The text is centered and reads: "MAIN MENU" at the top, "DISPLAY" in a larger font in the middle, and "DOWN UP EXIT" at the bottom.

MAIN MENU
DISPLAY
DOWN UP EXIT

Select the desired submenu with “UP” or “DOWN” and confirm with “P”.

If the submenu is protected by password, the display shows:

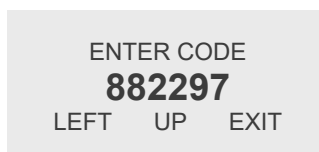A rectangular display area with a light gray background. The text is centered and reads: "ENTER CODE" at the top, "882297" in a larger font in the middle, and "LEFT UP EXIT" at the bottom.

ENTER CODE
882297
LEFT UP EXIT

Change the indicated number with the softkeys “LEFT” and “UP” to “882207” and confirm with “P”.

Select the desired submenu or function with “NEXT” or “UP” and “DOWN” and confirm with “P”.

Every setting must be confirmed with “P” for storing the setting or with “EXIT” for exiting without storing.

For leaving any menu press “EXIT” several times until the measuring menu reappears.

3. Installation

NOTE:

All installations must only be executed by qualified personnel.

3.1. Mechanical Installation

Prepare the mounting holes for the VTG in the wall. For the right position refer to chapter 7.3.3

Remove the cable from the pickup.

Screw the pickup (11) by hand (without tools) into the M14x1.5 sensor thread of the meter until you reach the stop.

WARNING!

Too much force will damage the sensor tip!

Turn backwards the pickup by 45°.

Fix the pickup with the fixing nut.

NOTE:

If you turn backwards the pickup by more than 90°, the flow might not be measured correctly. If you do not turn back the pickup, the sensor tip might be damaged with strong temperature changes.

Fix the VTG to the wall.

Reaffix the pickup cable to the pickup.

3.2. Electrical Installation

Make sure that the unit is properly mounted before making the electrical connections.

NOTE:

Switch off the power supply before making changes at the electrical installation.

This unit must be grounded.

The VTG/VIG requires a regulated DC power supply of 24 V nominal and works properly over a supply range of 15 V to 30 V.

For connecting the VTG/VIG, shielded cables must be used. The shield should be connected to the PE terminal. If in bigger systems the shield must not present a DC connection for avoiding high ground loop currents, make the ground connection of the shield via a capacitor of e. g. 100 nF.

WARNING!

Improper grounding and shielding may lead to bad EMC behavior or danger to your health!

NOTE:

Make sure that all cable and wires are connected and fixed properly before applying power to the VTG/VIG.

3.2.1. Connecting the cables

Prepare the cable for installation:

- Separate the single conductors for about 8cm
- Strip the end for about 7mm and cover it with a cable end sleeve
- Connect if necessary a stranded wire to the shield

Remove the display cover and flip up the display.

Feed the cable through the cable gland.

Connect the wire according to chapter 3.2.2 to 3.2.6.

Adjust the position of the cable in the cable gland in that way that the single conductors remain short but free of tension and fix the cable in the cable gland.

Flip down the display and reattach the display cover.

3.2.2. Power Supply and Grounding

The power supply input of the VTG/VIG has an internal diode against reverse polarity.

All pins of the connector are RF blocked to the case (PE) by 2.2 nF capacitors. For proper operation therefor the case must be grounded. The grounding might be done via the cable shield or via the meter.

The VTG / VIG provides inside a screw M4 and outside a screw M6 for connecting PE.

NOTE:

In bigger systems the cable shield must not be the only PE connection.

For best RF behavior the power supply should be grounded at 1 point in the system

3.2.3. Operation as passive 4 - 20 mA sensor

For operating the VTG/VIG as passive 4 - 20 mA sensor, only pin 1 and 2 are to be connected.

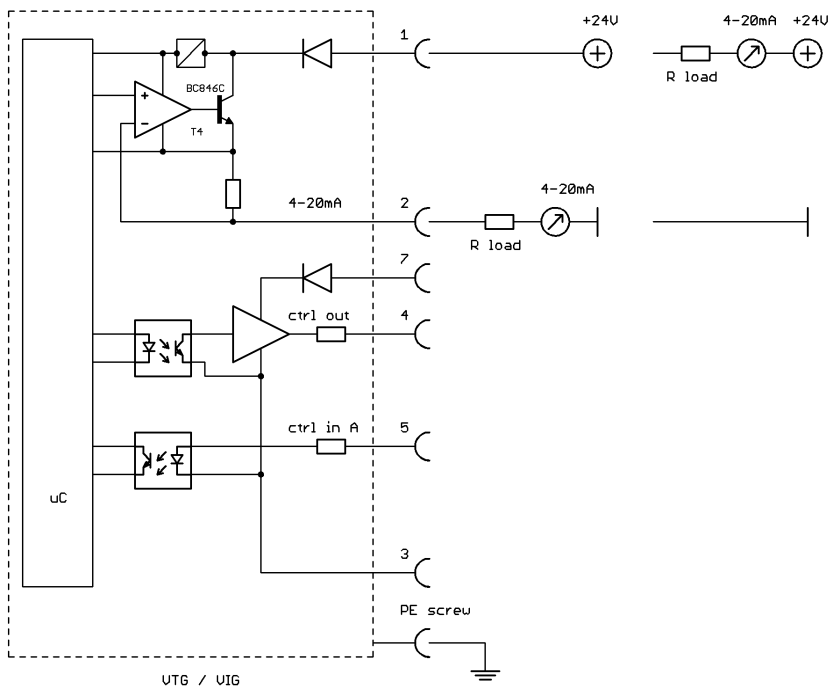


Fig. 3: Wiring diagram passive 4 - 20 mA sensor

The maximum load resistance (input resistance of the ammeter plus protective resistor) can be calculated as

$$R_{L_{\max}} = (U_B - 15V) / 20.5 \text{ mA}$$

The load resistor plus the ammeter can be connected in the positive or in the negative supply rail.

With 2 wire passive operation and for Ex versions there is no display backlight.

Versions with NAMUR frequency output are to be connected in the same way.

3.2.4. Operation with current and frequency output

If with versions with push-pull output pin 7 is connected to the positive supply and pin 3 to GND, the push pull frequency output is powered up as well and the backlight (only with non-Ex versions) lights up. However the current signal will be distorted.

Versions with NAMUR output do not have a separate power supply terminal and do not provide a backlight.

For the supply of the analog output (pin 1 and 2) and the digital output (pin 3 and 7), according to the requirement, separate supplies or a common supply might be used.

For the maximum load resistance refer to chapter 3.2.3

NOTE:

If pin 1 and 2 are left open, the μC of the VTG/VIG will not operate at all!

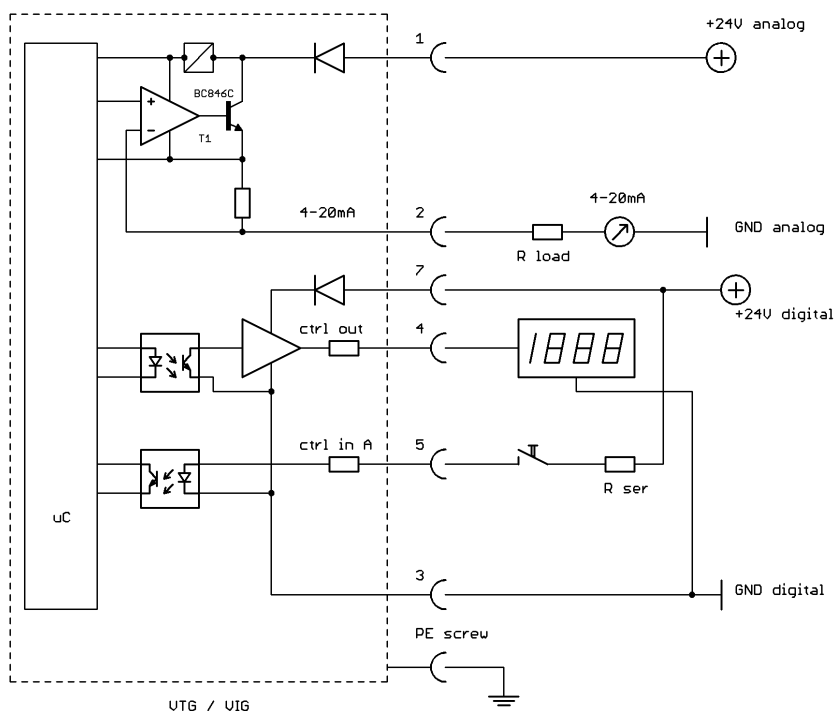


Fig. 4: Wiring diagram 3 wire operation with analog and frequency output, push-pull output

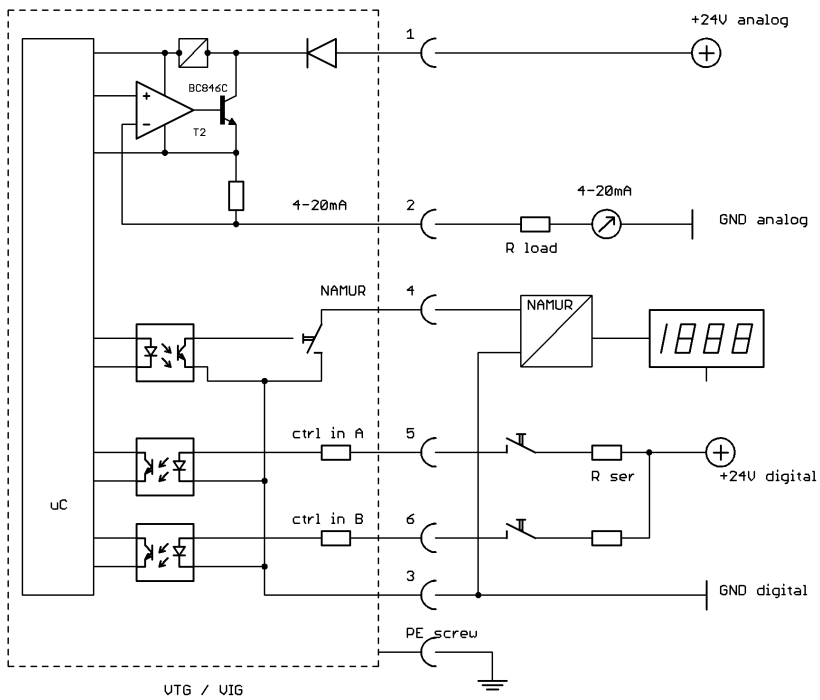


Fig. 5: Wiring diagram 3 wire operation with analog and frequency output, NAMUR output

The digital output is an asymmetrical push pull output stage with $R_1 = 720 \, \Omega$ and $R_2 = \Omega$.

The high and low output voltages can be calculated as:

$$V_{\text{high}} = V_{\text{supply}} - 0.5 \, \text{V} - (720 \, \Omega * I_{\text{load}})$$

$$V_{\text{low}} = 470 \, \Omega * I_{\text{load}}$$

The output is short circuit prove.

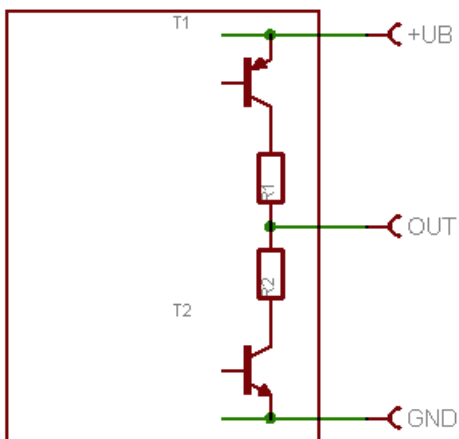


Fig. 6: Digital output stage of the VTG/VIG

3.2.5. Operation with frequency output only

Connect the VTG/VIG according to the diagram.

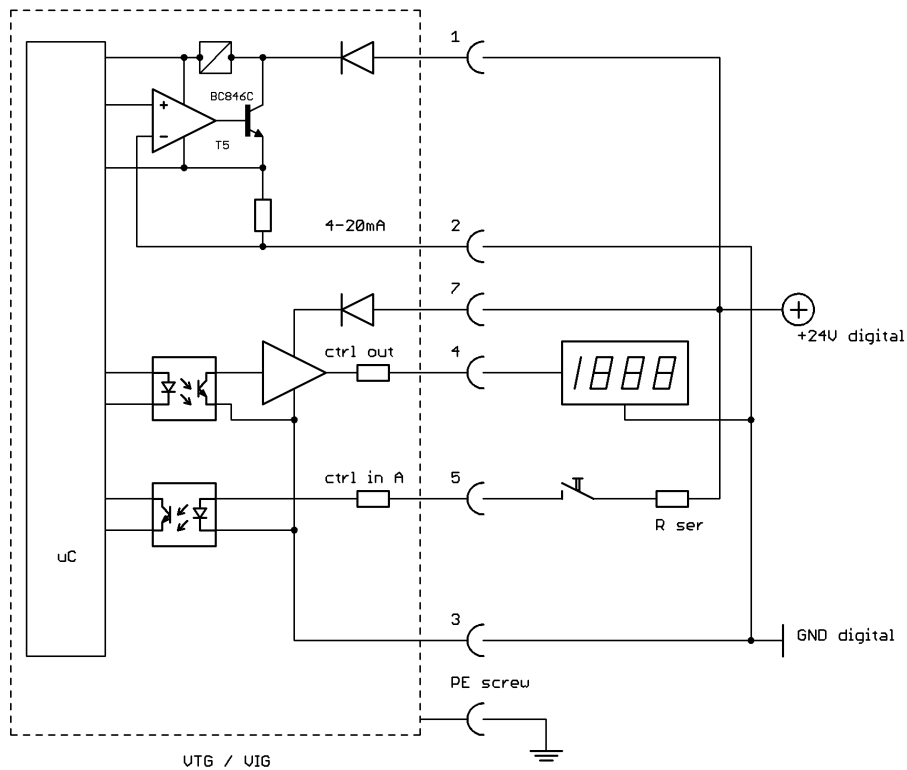


Fig. 7: Wiring diagram 3 wire active with frequency output only, push-pull output

For the description of the frequency output refer to chapter 3.2.4.

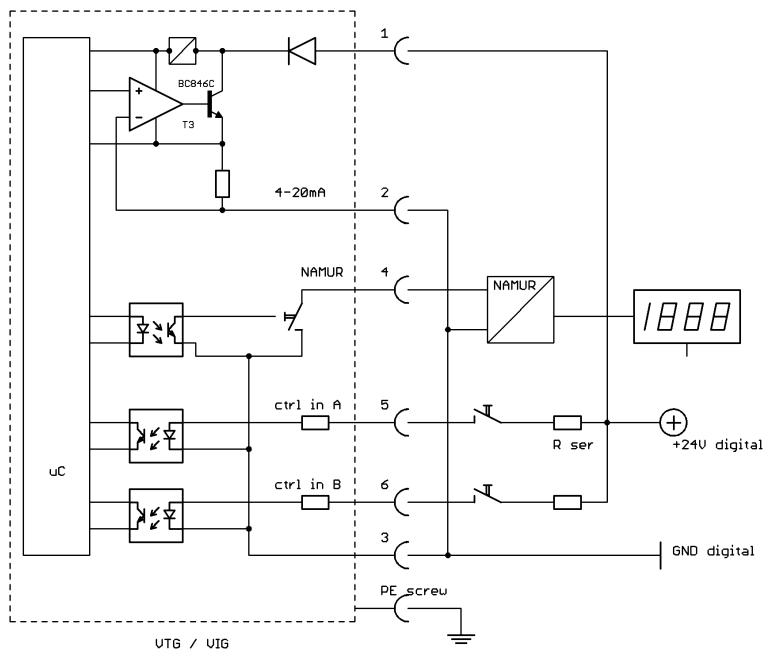


Fig. 8: Wiring diagram 3 wire active with frequency output only, NAMUR output

In this operating mode the current output can be set to “4mA constant”, which reduces the power dissipation in the VTG/VIG.

NOTE:

If pin 1 and 2 are left open, the μ C of the VTG/VIG is not powered and the unit will not operate at all!

3.2.6. Operation as indicator without outputs

If the VTG/VIG is to be used just as an indicator only, connect terminal 1 to the positive supply and terminal 2 to the supply GND.

In this operating mode the current output can be set to “4 mA constant”, which reduces the power dissipation in the VTG/VIG.

If additionally pin 3 is connected to GND and pin 7 to the positive supply, the backlight lights up (non-Ex versions with push-pull output only).

3.3. Ex Installation

WARNING!

In hazardous areas all installations must be carried out by trained personnel! Switch off the power supply before making any changes to the installation!

3.3.1. 2 Wire Operation

If the VTG/VIG is to be used as 4 - 20 mA sensor without frequency output or as indicator without outputs, connect pin 1 and 2 to a suitable 4 - 20 mA isolation amplifier (see also chapter 3.2.3)

When used as indicator only, also a zener barrier can be used. Operation with Current and Frequency Output. If the analog output is set to "4mA", an isolation amplifier from the EWS series can also be used for standard display mode.

3.3.2. Operation with analogue and frequency output

If the analog output as well as the frequency output are required, for the analog output (pin1 and 2) a 4 - 20 mA isolation amplifier and for the digital output (pin 3, 4, 7) a suitable isolation amplifier (e. g. of the series EWS) are required.

If the control inputs are to be used, also therefore suitable barriers are required.

For further information see chapter 3.2.4.

3.3.3. Operation with Frequency Output only

If only the frequency output is needed, a suitable isolation amplifier or zener barriers are required. In that case connect pin 1 to pin 7 and pin 2 to pin 3.

If the current output is set to “4mA”, an isolation amplifier of the series “EWS” can be used as well.

If the control inputs are to be used, also therefore suitable barriers are required.

For further information see chapter 3.2.5.

4. Manual Operation

4.1. Power On Sequence and Principles of Manual Control

For about 2 second the display shows the device name and the SW version:

VTG
SW-NR:07-12

Now the VTG/VIG switches to the measuring mode, displaying the last active screen, e.g.:

0.000^{RATE}
0.00^{Batch}

In manual control the VTG/VIG is menu driven and provides 2 operational modes, the “Measuring Mode” and the “Control Mode”.

In the measuring mode the display shows the preselected measured values and all 4 pushbuttons have the function printed on them. The switch over between the different measuring displays can be made at any time without interrupting the measurements.

If a value to be displayed exceeds the display range, the display shows “OVERFLOW”.

In the control mode the 3 pushbuttons below the display have varying functions. The actual function is indicated in the display, just above the pushbutton.

In the control menu all necessary settings can be made.

The control menu contains the submenus “DISPLAY”, “SETUP”, “LINEAR” (only units with built in linearization), “I/O-TEST” and “SERVICE”.

In the menu “DISPLAY” the local display of the unit can be adapted to the actual needs. All settings made in this menu have no influence on the measurements.

In the menu “SETUP” all settings to adapt the unit to the actual needs can be made, like configuring the inputs and outputs.

In the menu “I/O-TEST” all inputs and outputs can be tested after the installation.

In the menu “LINEAR” (linearization) the parameters for the built in linearization can be set.

The menu “SERVICE” allows for calibration of the unit.

For protecting the unit against unintentional changes, all submenus that contain critical parameters are password-protected.

4.1.1. Function of the LED's

The LED „S1“, lights green, if the control output is in the active state in one of the operating modes “LIMIT”. If the output is set to f-out, TOTAL COUNT or OFF, the LED is deactivated. The LED „S2“, lights red, if the loop current exceeds 20mA.

4.2. Measuring mode

4.2.1. Function of the keys

In the measuring mode all pushbuttons have a fixed function:

| | |
|---------|--|
| P | Opens the Control Menu if pressed for > 3 seconds |
| Reset | Resets the batch counter to zero, if the function "KEY RESET" is enabled |
| Display | Toggles the display between the different screens. |
| Info | Opens the info menu |

4.2.2. Display selection

The VTG/VIG provides the following display:

RATE:

The display shows the actual flow with the selected resolution and engineering unit.

BATCH:

The display shows the BATCH counter with the selected resolution and engineering unit.

TOTAL:

The display shows the TOTAL counter with the selected resolution and engineering unit.

RATE-BATCH:

The display shows the actual flow and the BATCH counter with the selected resolution and engineering unit.

GRAPH 1:

The display shows the flow over the last 15 s. 100 % equals the value specified for 20mA loop current.

GRAPH 2:

The display shows the actual flow in percent as bar graph and as a number. 100 % equals the value specified for 20 mA loop current.

For changing from one screen to the other just press the pushbutton "Display".

4.2.3. Resetting the batch value

For easy batching in local operation the VTG/VIG provides the possibility to reset the batch value by pressing the pushbutton "Reset".

Resetting is only possible, if the display screen "Batch" is active.

For protecting the unit against unintentional resetting of the batch value, this function can be disabled.

Ex work the function is disabled.

For changing the setting refer to chapter 4.3.4.9.

4.2.4. Info Menu

For easy debugging in case of a malfunction of the system, the VTG/VIG provides an info menu for the service personnel. It does not contain information required for normal operation.

For entering the menu press the pushbutton "Info" for about 3 seconds.

For returning to the normal menu press "Display".

4.3. Control Mode


The VTG/VIG operates normally also if the control menu is activated.

In the control mode the VTG/VIG can be adapted to the individual application. As unintentional changes of the settings might cause problems, some submenus are password protected.

To enter the control mode proceed as follows:

Press "P" for about 3 seconds

The display shows:

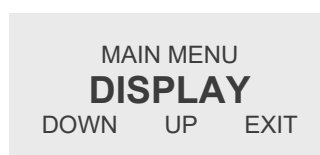

Select the desired submenu with "UP" and "DOWN" and confirm with "P" or skip with "EXIT".

4.3.1. Function of the keys

In the setup menu some pushbuttons have changed functions, indicated in the display above the pushbutton:

| | |
|-------------|---|
| P | Confirms the selection in a list or any kind of inputs If changes get confirmed with "P", they will be used immediately for the calculations |
| Reset | Performs the indicated function |
| Display | Performs the indicated function |
| Info (EXIT) | Exits the current menu point without altering the original value |

4.3.2. Submenus in the Main Menu

In the Main Menu the following submenus are addressable:

DISPLAY:

Presetting the display.

Changes made in this submenu have no influence on the general function as well on the accuracy of the unit.

SETUP:

Adjusting the VTG/VIG to the meter and configuring the inputs and outputs.

This submenu is password protected.

LINEAR:

Setting the parameters for the linearization.

Not available in all units.

This submenu is password protected.

I/O-TEST:

Setting the outputs to defined values and displaying the actual status of the control inputs for testing the electrical connections.

This submenu is password protected.


SERVICE:

Calibrating the current loop.


This submenu is password protected.

4.3.3. DISPLAY Menu

Select in the main menu

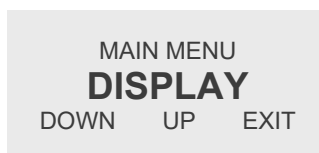

Press "P". The display shows:

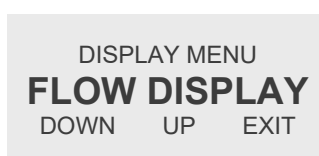

The following submenus are available:

FLOW DISPLAY:

Setting the flow units, the flow decimal point and a flow filter for the display.

TOTAL DISPL:

Setting the total and batch units and the total and batch decimal point.

DENS DISPLAY:

Setting the density units.

4.3.3.1. FLOW DISPLAY menu

In the submenu "FLOW DISPLAY" the flow dimensions, the flow decimal point and the flow filter for the display can be set.



The following units (volume or mass per time) can be selected:

| Time-Unit | Description |
|-----------|-------------|
| S | second |
| MIN | minute |
| H | hour |
| D | day |

| Volume-Unit | Description |
|-------------|------------------|
| CC | cubic centimeter |
| L | liter |
| m3 | cubic meter |
| UGAL | US gallon |
| LOZ | fluid ounce |
| EGAL | English gallon |
| BBL | English barrel |

| Mass-Unit | Description |
|-----------|-------------|
| G | gram |
| KG | kilogram |
| LB | pound |
| OZ | dry ounce |
| T | metric ton |
| ST | stone |

NOTE:

When mass units are selected, a correct setting of the density (see chapter **Fehler! Verweisquelle konnte nicht gefunden werden.**) is required.

Use the keys "UP" and "DOWN" to select setting the engineering unit and confirm with "P" or skip with "E".

If the units are changed from volume to mass or vice versa, the display shows:

CHANGING FROM MASS TO
VOLUME UNITS WILL RES
THE TOTALS PROCEED?
YES NO

NOTE:

When changing from mass to volume units or vice versa, the total unit will be changed correspondingly.

With every change between mass and volume flow units the batch and the total counter get reset to zero!

When pressing "NO", the changes will be discarded.

The display shows:

SELECT FLOW DP
0.000
LEFT EXIT

Use the key "LEFT" to select the desired decimal point position and confirm with "P" or skip with "EXIT".

The display shows:

```

DISPLAY FILTER (0-99s)
  1.00000 s
LEFT   UP   EXIT
  
```

The time constant t is the time the output needs after a jump from x to 0 to go to $x/e = x/2.72$.

Use the keys "UP" and "LEFT" to select the desired time constant and confirm with "P" or skip with "EXIT".

The display returns to the display menu.

4.3.3.2. TOTAL DISPL menu

In the submenu "TOTAL DISPL" the total and batch dimensions and decimal point can be set.



The following units (volume or mass, depending on the selected flow unit) can be selected:

| Volume-Unit | Description |
|-------------|------------------|
| CC | cubic centimeter |
| L | liter |
| m3 | cubic meter |
| UGAL | US gallon |
| LOZ | fluid ounce |
| EGAL | English gallon |
| BBL | English barrel |
| Mass-Unit | Description |
| G | gram |
| KG | kilogram |
| LB | pound |
| OZ | dry ounce |
| T | metric ton |
| ST | stone |

Use the key "NEXT" to select setting the engineering unit and confirm with "P" or skip with "EXIT".

The display shows:

```

SELECT TOTAL DP
  0.000
LEFT           EXIT
  
```

Use the key "LEFT" to select the desired decimal point position and confirm with "P" or skip with "EXIT".

NOTE:

If the value for total gets bigger than the defined display range, the dot will be shifted to the right automatically. If the value gets bigger than 999 999 (more than 6 digits left of the dot), the display shows “OVERFLOW”. Select a bigger unit (L instead of CC or M3 instead of L).

The display returns to the display menu.

4.3.3.3. DENS DISPLAY menu

In the submenu “DENS DISPLAY” the density dimension can be set.

Setting a density is only required, if mass units (g, kg, t, lb, ...) are to be displayed. If volume units are to be displayed, the density is not used.



The following units (mass per volume) can be selected:

| Unit | Description |
|---------|---------------------------|
| G/CC | gram per cubic centimeter |
| g/L | gram per liter |
| KG/L | kilogram per liter |
| LB/FT3 | pound per cubic feet |
| LB/UGAL | pound per US gallon |
| KG/M3 | kilogram per cubic meter |

Use the key “NEXT” to select setting the engineering unit and confirm with “P” or skip with “EXIT”.


The display returns to the display menu.

4.3.4. SETUP Menu

Select in the main menu



Press “P”. The display shows:

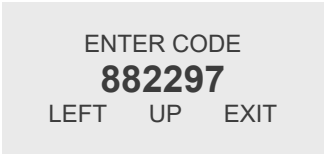

Change the indicated number with “LEFT” and “UP” to 882207 and confirm with “P”.

If a wrong code is entered, the display shows “ERROR” for about 2 s and then asks for a new input.

When the correct code is entered the display shows:



SETUP MENU
K-FACTOR
DOWN UP EXIT

The following submenus are available:

K-FACTOR:

Defines the relation between the input frequency and the calculated flow.

CUT-OFF:

Sets the cut off frequency for the flow.

FLOW-FILTER:

Sets the filter time constant for the flow.

DENSITY:

Sets the density required for calculating mass and mass flow.

DIG.OUT A:

Configures the digital output A (frequency and control output).

ANALOG-OUT:

Configures the analog output.

CTL-INPUT:

Configures the control input.

LINEAR:

Enables/disables the linearization.

KEY-RESET:

Enables / disables the push button "Reset".

SAVE DATA:

Stores the current settings to the backup memory.

RECALL DATA:

Recalls the stored settings from the backup memory.

4.3.4.1. K-FACTOR menu

In the submenu "K-FACTOR" the K-factor for the flow calculation can be set.
The K-factor is normally given on the calibration sheet of the meter.



SETUP MENU
K-FACTOR
DOWN UP EXIT

P →



K-FACTOR (IMP/LITER)
60000.0 IMP/L
LEFT UP EXIT

Use the keys "LEFT" and "UP" to select the desired value and confirm with "P" or skip with "EXIT".
The display returns to the setup menu.

4.3.4.2. CUT-OFF menu

In the submenu “CUT-OFF” the cutoff frequency for the input can be set.

If the filtered input frequency is below the cutoff frequency, the calculated flow is “0” and consequently all outputs show zero flow and the total and batch value remain unchanged.



Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “E”.

The display returns to the setup menu.

4.3.4.3. FLOW-FILTER menu

In the submenu “FLOW-FILTER” the time constant for the flow filter can be set.

The time constant t is the time the output needs after a jump from x to 0 to go to $x/e = x/2.72$.

A rough relation between the time and the filtered flow value after a jump is

| Elapsed time | Remaining error (% of the step) |
|--------------|---------------------------------|
| 1 * t | 30 |
| 2 * t | 10 |
| 3 * t | 3 |
| 4 * t | 1 |



Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

The display returns to the setup menu.

4.3.4.4. DENSITY menu

In the submenu “DENSITY” the density value for calculating mass and mass flow can be set.

A correct value for the density is required, if a mass and mass flow is to be measured.



Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

The display returns to the setup menu.

4.3.4.5. DIG.OUT A menu

In the submenu “DIG.OUT A” the frequency output can be configured.

The following settings are possible:

F-OUT 1:1:

The output frequency equals the input frequency. A linearization will not be regarded.

F OUT NORM:

The output frequency is derived from the calculated flow. If a linearization is active, the output frequency is linearized as well. The output frequency range is 1.2 to 1,000 Hz.

TOTAL COUNT:

For each selected increment of total the output produces a pulse.

FLOW LIMIT:

The output changes its state if the calculated flow exceeds the set limit value.

BATCH LIMIT:

The output changes its state if the batch value exceeds the set limit value.

OFF:

The output is disabled.



Use the key “NEXT” to select the desired operation mode and confirm with “P” or skip with “EXIT”.

F-OUT 1:1:



The unit sets the F-OUT 1:1 mode and returns to the setup menu.

F OUT NORM:



Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

NOTE:

The output frequency range is 1.2 to 1,000Hz. Calculated frequencies lower than 1.2Hz produce a zero output, frequencies higher than 1,000 Hz will be set to 1,000 Hz.

The display shows:

ENTER FULLSCALE FLOW
10000.0 L/MIN
LEFT UP EXIT

Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

The display returns to the setup menu.

TOTAL COUNT:

SELECT DIG OUTPUT MODE
TOTAL COUNT
NEXT EXIT

P →

INCREMENT VALUE
1000.00 LITER
LEFT UP EXIT

Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

The display shows:

ENTER PULSETIME 1-420ms
50.0000 ms
LEFT UP EXIT

Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

The display shows:

OUT-STATUS
ACTIVE = HIGH
NEXT EXIT

Active HIGH means that the output is normally low and produces a “HIGH” pulse, active low is the opposite.


Use the key “NEXT” to select the desired operation mode and confirm with “P” or skip with “EXIT”.

The display returns to the setup menu.

FLOW LIMIT:

Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

The display shows:

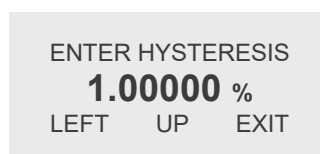


The high going threshold (rising flow) is FLOW LIMIT + HYSTERESIS, the low going is FLOW LIMIT - HYSTERESIS.

With a FLOW LIMIT of 10 l/min and 5 % hysteresis, the active going value is 10.5 l/min, the inactive going value 9.5 l/min

Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

The display shows:

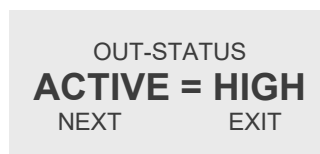

Active HIGH means that the output is low for low flow and high for a flow above the threshold, active low is the opposite.

Use the key “NEXT” to select the desired operation mode and confirm with “P” or skip with “EXIT”.

The display returns to the setup menu.

BATCH LIMIT:

Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

The display shows:

```

      OUT-STATUS
ACTIVE = HIGH
    NEXT      EXIT
  
```

Active HIGH means that the output is low for a batch below the set "BATCH VALUE" and high for a batch above "BATCH VALUE", active low is the opposite.

Use the key "NEXT" to select the desired operation mode and confirm with "P" or skip with "EXIT".

The display returns to the setup menu.

OFF:

```

SELECT DIG OUTPUT MODE
OFF
  NEXT      EXIT
  
```

P →

```

      SETUP MENU
DIG. OUT A
  DOWN  UP  EXIT
  
```

The unit sets the output to OFF and returns to the setup menu.

4.3.4.6. ANALOG-OUT menu

In the submenu "ANALOG-OUT" the 4 - 20 mA output can be configured.

The following settings are possible:

FLOW:

The output current is calculated from the measured flow value. A zero flow gives 4 mA, the defined maximum flow gives 20 mA.

4mA:

The output is set inactive, a connected meter will see 4mA constant current.

```

      SETUP MENU
ANALOG OUT
  DOWN  UP  EXIT
  
```

P →

```

SELECT ANALOG MODE
FLOW
  NEXT      EXIT
  
```

Use the key "NEXT" to select the desired operation mode and confirm with "P" or skip with "E".

FLOW:

```

SELECT ANALOG MODE
FLOW
  NEXT      EXIT
  
```

P →

```

ANALOG END VALUE
1000.00 L/MIN
  LEFT  UP  EXIT
  
```

Use the keys "LEFT" and "UP" to select the desired value and confirm with "P" or skip with "E".

The display returns to the setup menu.

4mA:



The unit sets the output to 4 mA and returns to the setup menu.

4.3.4.7. CTL-INPUT menu

In the submenu “CTL-INPUT” the control input output can be configured with the versions V*G-*-K-*-P (screw type terminals, push pull output, 1 control input, Ex or non Ex).


The following settings are possible:

RES. BATCH:

An active signal at the control input resets the batch counter to zero.

HOLD:

An active signal at the control input stops summing up the total and batch value.

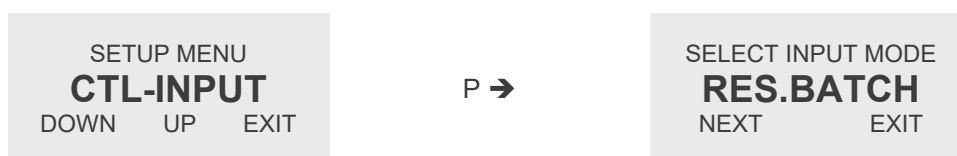

Use the key “NEXT” to select the desired operation mode and confirm with “P” or skip with “EXIT”.

The display returns to the setup menu.

Versions with NAMUR output have 2 control inputs. With that versions the submenu “CTL IN” only shows the function of the inputs which not can be altered.



If in the submenu “LINEAR” (see chapter 0) the bank selection is set to “EXTERNAL”, both control inputs are used to select the linearization bank. In that case the display shows:



Press “EXIT”. The display returns to the setup menu.

4.3.4.8. LINEAR menu

In the submenu “LINEAR” can be set, if the linearization is disabled or which of the linearization banks is to be used for linearization.

The following settings are possible:

LIN-BANK n:

Linearization bank n (1 ... 3) is active.

SELECT EXT (not with V*C-*-K-*-P):

Selecting the linearization banks via CTL IN A and B.

The code for the bank selection is:

- A=B=low: Bank 1
- A = high: Bank 2
- B = high: Bank 3
- A=B=high: not allowed. The selected bank depends on the sequence in which A and B are applied

OFF:

Linearization deactivated.



Use the key “NEXT” to select the desired linearization bank or linearization OFF and confirm with “P” or skip with “EXIT”.

The display returns to the setup menu.

4.3.4.9. KEY-RESET menu

In the submenu “KEY-RESET” the pushbutton “Reset” can be enabled or disabled.

If the pushbutton Reset is active, it can be used to reset the batch counter.




Use the key “NEXT” to enable or disable the pushbutton “Reset” and confirm with “P” or skip with “EXIT”.

The display returns to the setup menu.


4.3.4.10. SAVE DATA menu

In the submenu “SAVE DATA” the current settings can be stored in a backup memory. The stored settings can be reactivated with “RELOAD DATA” (see chapter 4.3.4.11).

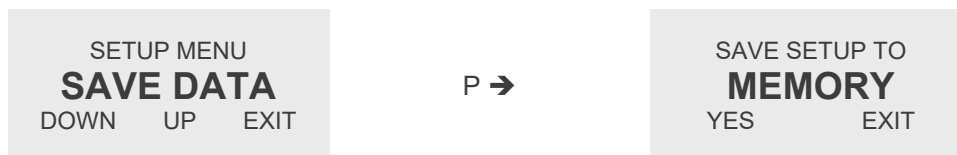

Save the data by pressing “YES” or skip with “EXIT”.

If “YES” is pressed, the display counts up for a few seconds and then shows for 2 seconds:

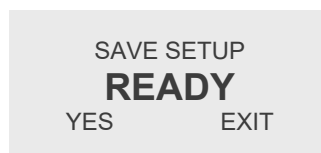

The display returns automatically to the setup menu.

NOTE:

Only the settings made in the menus “DISPLAY”, “SETUP” and “SERVICE” will be stored.

The settings made in the menu “LINEAR” cannot be stored to the backup memory and consequently cannot be recalled.


4.3.4.11. RECALL DATA menu

In the submenu “RECALL DATA” the stored settings can be reloaded from the backup memory. This is especially useful for returning to a running setup after trying different settings. For storing data in the backup memory refer to chapter 0.



Recall the data by pressing “YES” or skip with “EXIT”.

If “YES” is pressed, the display counts up for a few seconds and then shows for 2 seconds:

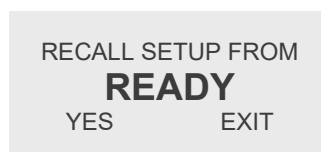

The display returns automatically to the setup menu.

NOTE:

The backup memory only contains the settings made in the menus “DISPLAY”, “SETUP” and “SERVICE”. The settings made in the menu “LINEAR” cannot be stored to the backup memory and consequently cannot be recalled.


4.3.5. LINEAR Menu

In the “LINEAR” menu the data for the built in linearization can be entered.

The data set is organized in 3 independent data banks. In the SETUP menu can be selected, which of the banks (1, 2, 3 or none) is to be used for the linearization.


If e.g. a meter has to be used and linearized at 2 or 3 different viscosities, put the linearization values for each viscosity in a different block. In the SETUP menu can be selected, which block has to be used. (see chapter 0)

Select in the main menu



MAIN MENU
LINEAR
DOWN UP EXIT

Press “P”. The display shows:

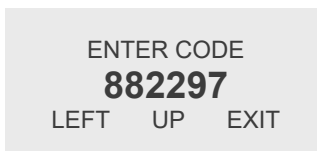

ENTER CODE
882297
LEFT UP EXIT

Change the indicated number with “LEFT” and “UP” to 882207 and confirm with “P”.

If a wrong code is entered, the display shows “ERROR” for about 2 s and then asks for a new input.

When the correct code is entered the display shows:



SELECT LIN BANK
LIN BANK 1
NEXT EXIT

Use the key “NEXT” to select the desired linearization bank and confirm with “P” or skip with “EXIT”.

The display shows:

K-FACTOR (IMP/LITER)
50.000 IMP/L
LEFT UP EXIT

Use the keys "LEFT" and "UP" to select the desired value and confirm with "P" or skip with "EXIT".

The display shows:

LIN FREQUENCY POINT 01
1.00000 Hz
LEFT UP EXIT

Use the keys "LEFT" and "UP" to select the desired value and confirm with "P" or skip with "EXIT".

The display shows:

LIN ERROR POINT 01
1.00000 %
LEFT UP EXIT

Use the keys "LEFT" and "UP" to select the desired value and confirm with "P" or skip with "EXIT".

The sequence goes on with the points 2 to 20.

If $n < 20$ points are to be entered, set for the linearization point $n+1$ the frequency to "0".

If the frequency "0" is entered or point 20 is set, the display shows:

*** READY ***
THE LINEARIZATION
VALUES ARE
PROGRAMMED NOW

After 2 second the display automatically returns to the main menu.

4.3.6. I/O TEST Menu

In the “I/O TEST” menu the inputs and outputs as well as the external wiring can be tested.

Select in the main menu

```

MAIN MENU
I/O TEST
DOWN  UP  EXIT
  
```

Press “P”. The display shows:

```

ENTER CODE
882297
LEFT  UP  EXIT
  
```

Change the indicated number with “LEFT” and “UP” to 882207 and confirm with “P”.

If a wrong code is entered, the display shows “ERROR” for about 2 s and then asks for a new input.

When the correct code is entered the display shows:

```

I/O-TEST MENU
F-OUT
NEXT      EXIT
  
```

Use the key “NEXT” to select the desired test point and confirm with “P” or skip with “EXIT”.

F-OUT:



Use the key “ON/OFF” and for switching on and off the 100 Hz output frequency and end the test with “EXIT”.

When “EXIT” is pressed, the display returns to the I/O test menu.

ANALOG OUT:

Use the keys “LEFT” and “UP” to select the desired value and confirm with “P” or skip with “EXIT”.

When “P” is pressed the unit sets the selected current, displays OKAY for 2 seconds and then waits for the next current.

If values below 3.8 mA are set, the quiescent current (about 3.8 mA) will flow.

When “EXIT” is pressed, the display returns to the I/O test menu.

STATUS IN:

The display shows the current status at the control input.

When “EXIT” is pressed, the display returns to the I/O test menu.

SERIAL:

The display shows the current status in the UART send and receive buffers.

When “EXIT” is pressed, the display returns to the I/O test menu.

4.3.7. SERVICE Menu

The “SERVICE” menu is used to calibrate the 4 - 20 mA output.

For a description of the menu refer to chapter 6.3.

5. Remote operation

As a standard the VTG/VIG is equipped with a proprietary KEM interface, which communicates via the frequency output and the control input.

As an option a USB or HART interface is available.

The KEM and USB interface can be used to set up the unit via a PC or to perform simple measuring tasks. For implementing the unit in a bigger system, the HART interface is recommended.

5.1. Standard interface

For communicating via the standard interface the interface converter CON.USB.WT (available as accessory) and the remote control program EasyControl for WINDOWS are required. Easy Control can be downloaded free of charge from our webpage.

NOTE:

Versions with NAMUR outputs do not provide the standard interface!

5.1.1. Electrical connections

Switch off the power supply of the VTG/VIG.

Disconnect the cable from the VTG/VIG.

Connect the cable "WT" of the CON.USB.WT to the VTG/VIG via a suitable adaptor (available upon request from KEM).

Pin 1 of the connector of the CON.USB.WT is to be connected to terminal 1 and 7 of the VTG /VIG, pins 2-5 to the terminals 2-5.

For operating the VTG/VIG by the CON.USB.WT without external power supply switch the internal rotary switch to "INT" and leave the connector "CTL OUT" of the CON.USB.WT open. With that configuration the VTG/VIG will be powered via the USB interface.

Start EasyControl on your PC.

Search the VTG/VIG via "SEARCH DEVICE" and establish the connection via "CONNECT". If the VTG/VIG was selected correctly, its type, serial number and SW version will be displayed in the EasyControl window.

The operation via EasyControl is menu driven and self-explaining. Further information can be found in the EasyControl manual.

5.2. USB interface

For communicating via the USB interface, the remote SW EasyControl (free of charge available from our Webpage) is required.

If the VTG/VIG is connected to the USB interface, is powered via USB. An external power supply is only required, if the current or frequency output is to be used.

NOTE:

As the USB protection cover must be opened for using the USB interface, the ingress protection is reduced to IP20, when the USB cable is connected!

WARNING!

In hazardous areas the USB interface must not be used!

5.2.1. Electrical connection

Switch off the power supply of the VTG/VIG.

Remove the display cover.

Connect the USB cable to the VTG/VIG (connector Mini-B) and to the PC.

If any of the outputs of the VTG/VIG is to be used, switch on the power supply of the VTG/VIG again.

Start EasyControl on your PC.

Search the VTG/VIG via "SEARCH DEVICE" and establish the connection via "CONNECT". If the VTG/VIG was selected correctly, its type, serial number and SW version will be displayed in the EasyControl window.

The operation via EasyControl is menu driven and self-explaining. Further information can be found in the EasyControl manual.

5.3. HART

The HART interface modulates the 4-20mA current of the VTG/VIG with the data. For using the HART interface, a special HART modem and a special SW are required.

5.3.1. Electrical connection for HART

Connect the VTG/VIG 1 as described in chapter 3.2 and connect the HART communicator between pin 2 and your current meter or between pin 2 and GND, if the current is not to be measured.

Refer to the manual of your HART communicator for the proper connection.

5.3.2. HART Interface Protocol

For getting the newest DD file contact KEM.

6. Service and Maintenance

6.1. Maintenance

The VTG/VIG does not require regular maintenance.

If for the specific application an obligatory calibration is required, refer to the corresponding national regulations for the necessary calibration intervals.

6.2. Service

The VTG/VIG does not contain any user serviceable parts.

In case of malfunction, please contact your nearest dealer or directly KEM.

For the addresses see the last page of this document.

6.3. Calibration

If necessary the current output of the VTG/VIG can be calibrated.

For calibrating the current output, a digital Ampere meter (DAM) with a measuring range up to 22 mA, at least 4 ½ digits resolution and an accuracy better 0.05 % is required.

For calibrating the VTG/VIG proceed as follows:

Connect the power supply (see chapter 3.2.3).


Press "P" until the display shows:



MAIN MENU
DISPLAY
DOWN UP EXIT

Use the keys "DOWN" or "UP" to select SERVICE and press "P" or quit with "EXIT"

The display shows:

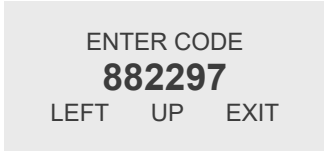

ENTER CODE
882297
LEFT UP EXIT

Change the indicated number with "LEFT" and "UP" to 882208 and confirm with "P" or quit with "EXIT".

If a wrong code is entered, the display shows "ERROR" for about 2 s and then asks for a new input.

When the correct code is entered the display shows:

SELECT CAL POINT
CAL 4-20mA
NEXT EXIT

The following submenus are available:

CAL 4-20mA:

Testing the quiescent current, calibrating the output at 4 mA and 20 mA.

6.3.1. Calibrating the current output

SELECT CAL POINT
CAL 4-20mA
NEXT EXIT

P →

ZERO CURRENT
I < 3.8mA

Check the current displayed on the DAM. If the current is higher than 3.8 mA the unit has a fault.

Press "P". The display shows:

ADJUST 4mA
750
MINUS PLUS EXIT

Change with "MINUS" and "PLUS" the number in the display, until the DAM shows 4.00 mA.

Press "P". The display shows:


ADJUST 20mA
3805
MINUS PLUS EXIT

Change with "MINUS" and "PLUS" the number in the display, until the DAM shows 20.00 mA.

Press "P". The display shows:

SELECT CAL POINT
CAL 4-20mA
NEXT EXIT

Press “EXIT”. The display shows:

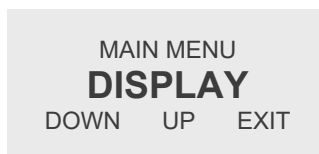

Enter the SETUP menu and store the calibrated values with “SAVE DATA” (see chapter 0).

6.3.2. Reset the TOTAL counter

For resetting the TOTAL counter proceed as follows:

- Select the display mask “TOTAL”
- Switch off the power supply
- Press “Reset”, switch on the power supply and hold “Reset” pressed, until the power up sequence will be ended.

NOTE:

Changing the engineering units from mass units to volume units or vice versa resets the TOTAL counter as well.

6.4. Trouble shooting

In case the VTG/VIG does not work properly, first check the following items:

No display

All cables properly connected?

→ Connect the missing cables

Power supply switched on?

→ Switch on the power supply

The flow display remains constantly “0”

VTG/VIG mounted properly?

→ Mount the pickup as described in chapter 3.1

The current remains “0” with correctly indicated flow

Pin 2 shorted to GND?

→ Correct the wiring

The current remains “4mA” with correctly indicated flow

Current output set to “4mA constant”?

→ Correct the setting for the current output, see chapter 4.3.4.6

Output frequency too high or unstable

Most probably EMC problems

Shield and ground properly connected?

→ Connect shield properly.

If necessary, try additional means of grounding and shielding

7. Listings

7.1. Warranty

For warranty refer to the general terms and conditions of KEM Küppers Elektromechanik GmbH, which can be found on the corresponding website (www.kem-kueppers.com).

7.2. Certifications and Compliances

| Category | Standards or description | |
|--|--|--|
| EU Declaration of Conformity - EMC | Meets intent of Directive 2014/30/EU for Electromagnetic Compatibility. Compliance is given to the following specifications as listed in the Official Journal of the European Union: | |
| | EN 61326/2006 | EMC requirements for Class A electrical equipment for measurement, control and laboratory use, including Class A radiated and Conducted Emissions ¹ and Immunity ¹ . |
| | IEC 61000-4-2/2009 | Electrostatic Discharge Immunity (Performance criterion B) |
| | IEC 61000-4-3/2011 | Radiated RF Electromagnetic Field Immunity (Performance criterion B) |
| | IEC 61000-4-4/A1-2013 | Electrical Fast Transient/Burst Immunity (Performance criterion B) |
| | IEC 61000-4-5/2015 ² | Power Line Surge Immunity (Performance criterion B) |
| | IEC 61000-4-6/2014 | Conducted RF Immunity (Performance criterion B) |
| | IEC 61000-4-11/2005 ² | Voltage Dips and Interruptions Immunity (Performance criterion B) |
| Australia/New Zealand Declaration of Conformity- EMC | Complies with the EMC Emission standard ¹ | |
| | AS/NZS 2064 | |
| FCC EMC Compliance | Emissions comply with the Class A Limits of FCC Code of Federal Regulations 47, Part 15, Subpart B ¹ . | |

¹ Compliance demonstrated using high-quality shielded interface cables.

² Applies only to units with AC mains supply instead of or additional to the SELV supply.

| Category | Standards or description | |
|---|---|--|
| EU Declaration of Conformity – Low Voltage | Compliance is given to the following specification as listed in the Official Journal of the European Union: Low Voltage Directive 2014/35/EU | |
| | EN 61010-1/2010 | Safety requirements for electrical equipment for measurement control and laboratory use. |
| Designed to meet the following US standards | UL 61010-1/2012 | Standard for electrical measuring and test equipment. |
| Designed to meet the following Canadian standards | CAN/CSA C22.2 no. 61010-1-4/2008 | Safety requirements for electrical equipment for measurement, control, and laboratory use. |
| International standards | IEC61010-1/2010 | Safety requirements for electrical equipment for measurement, control, and laboratory use. |
| Equipment Type | Test and measuring | |
| Safety Class | Class 1 (as defined in IEC 61010-1, Annex H) – grounded product | |

7.3. Technical Data

7.3.1. General Data

| | |
|-----------------------------------|---|
| Input VTG | |
| Type | Carrier Frequency |
| Frequency Range | 1 Hz - 3 kHz |
| Input VIG | |
| Type | Inductive |
| Frequency Range | 7 Hz - 3 kHz |
| Display and Manual Control | |
| Display | Graphic, 132 x 32 dot |
| Viewing Area | 15 mm * 50 mm |
| Backlight | Yellow / green (only 3 wire operation, not with NAMUR outputs or Ex) |
| Status Indicators | 2 LED for operation and fault indication |
| Programming | 4 softkeys |
| Analog Output | |
| Type | 4 - 20 mA, passive |
| Resolution | 12 bit |
| Linearity | ± 0.05 % of full scale |
| Temperature drift | 100 ppm/K |
| Load | < 400 Ω (at 24 V supply) |
| Output Signal | Flow rate |
| Digital Output | |
| Type | push pull or NAMUR (DIN19234) |
| Frequency Range | 0.5 - 3,000 Hz (mode input frequency) 1.2 - 1,000 Hz (mode normalized frequency) |
| Output Levels PP | <2 V / > 22 V (at 24 V supply, no load) |
| Output Resistance PP | 470/720 Ω |
| Output Current PP | 20 mA max. |
| Output Level NAMUR | according to DIN19234 |
| Output Signal | Input frequency, normalized frequency, Total count, flow limit, batch limit |
| Control Input | |
| Type | Opto coupler input |
| Min Pulse Duration | 100 ms |
| Input Level | < 3 V / > 13 V |
| Input Resistance | 3.3 kΩ |
| Interface | |
| Type | KEM WT (standard) USB (option) HART (option) |

| General | |
|------------------------|--|
| Supply Voltage | 24 V DC nominal, operating range: 15 - 30 V |
| Reaction Time | < 250 ms @ input frequency > 5 Hz |
| Connections | Internal screw type terminal |
| Cable Gland | 7 - 12.5 mm |
| EMC | according to EN 61000-6-4 and EN 61000-6-2 |
| Ambient Temperature | -4 °F up to +158 °F [-20 °C up to +70 °C] |
| Medium Temperature VTG | -4 °F up to +248 °F [-20 °C up to +120 °C] |
| Medium Temperature VIG | -4 °F up to +248 °F [-20 °C up to +302 °C] up to +464 °F/+240 °C upon request |
| Dimensions | See drawings |
| Material | Aluminum diecast (V*GA) or stainless steel (V*GS) |
| Weight | Approx. 1.5 kg (V*GA), ca. 3.4 kg (V*GS) |
| Protection Class | IP65 |

7.3.2. Ex-Data

Certification: ATEX EX II 2G Ex ia IIC T4 Gb

| Pin 1 referred to 2, Current Loop | |
|--|------------|
| U _i | 30 V DC |
| I _i | 120 mA |
| P _i | 750 mW |
| C _i | 25 nF |
| L _i | negligible |
| Pin 7 referred to 3, Supply Push-Pull Output | |
| U _i | 30 V DC |
| I _i | 120 mA |
| P _i | 850 mW |
| C _i | 5 nF |
| L _i | negligible |
| Pin 4 referred to 3, Push-Pull Output | |
| U _i | 30 V DC |
| I _i | 24.6 mA |
| P _i | 185 mW |
| C _i | 5 nF |
| L _i | negligible |
| Pin 4 referred to 3, NAMUR Output | |
| U _i | 20 V DC |
| I _i | 50 mA |
| P _i | 120 mW |
| C _i | 5 nF |
| L _i | negligible |
| Pin 5 resp. 6 referred to 3, Control Inputs | |
| U _i | 30 V DC |
| I _i | 100 mA |
| P _i | 60 mW |
| C _i | 5 nF |
| L _i | negligible |

7.3.3. Dimensional Drawings

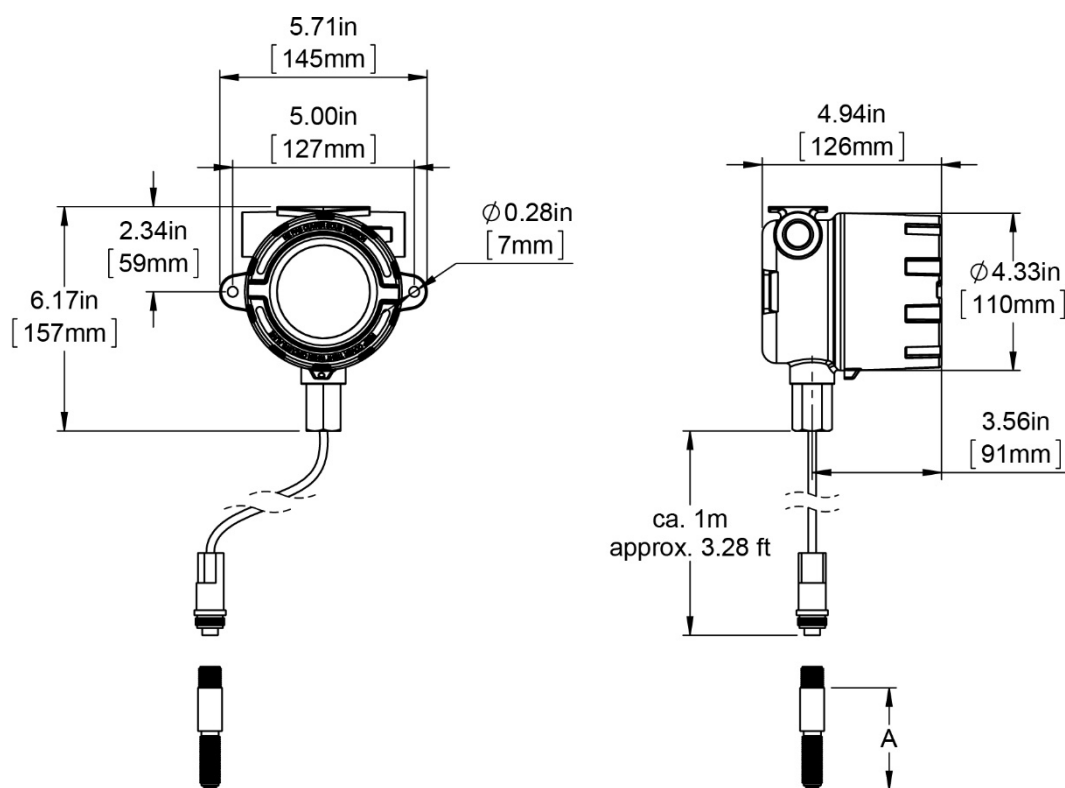


Fig. 9: Dimensional drawings VTG/VIG

7.4. WEEE and RoHS

The unit described herein is not subject to the WEEE directive and the corresponding national laws.

At the end of life forward the unit to a specialized recycling company and do not dispose it off as domestic waste.

The unit described herein fully complies with the RoHS directive.

7.5. List of figures

| | |
|---|----|
| Fig. 1: Operating elements VTG/VIG front side..... | 8 |
| Fig. 2: Operating elements VTG/VIG inside | 9 |
| Fig. 3: Wiring diagram passive 4 - 20 mA sensor..... | 13 |
| Fig. 4: Wiring diagram 3 wire operation with analog and frequency output, push-pull output..... | 14 |
| Fig. 5: Wiring diagram 3 wire operation with analog and frequency output, NAMUR output | 15 |
| Fig. 6: Digital output stage of the VTG/VIG | 15 |
| Fig. 7: Wiring diagram 3 wire active with frequency output only, push-pull output | 16 |
| Fig. 8: Wiring diagram 3 wire active with frequency output only, NAMUR output | 16 |
| Fig. 9: Dimensional drawings VTG/VIG..... | 47 |

KEM Headquarters

Liebigstraße 5
85757 Karlsfeld
Deutschland

T. +49 8131 59391-0
F. +49 8131 92604

info@kem-kueppers.com

KEM Sales

Liebigstraße 5
85757 Karlsfeld
Deutschland

T. +49 8131 59391-100
F. +49 8131 92604

sales@kem-kueppers.com

KEM Manufacturing Center

Wetzeller Straße 22
93444 Bad Kötzing
Deutschland

T. +49 9941 9423-0
F. +49 9941 9423-23

production@kem-kueppers.com

KEM Service & Repairs

Wetzeller Straße 22
93444 Bad Kötzing
Deutschland

T. +49 9941 9423-37
F. +49 9941 9423-24

service@kem-kueppers.com

*More distributors and partners can be found at:
www.kem-kueppers.com*